


CAMPO BASE


FERRINO


**ISTRUZIONI DI MONTAGGIO CUPOLINO • DOME SET-UP INSTRUCTIONS •
INSTRUCTION POUR LE MONTAGE DU DOME • INSTRUCCIONES PARA EL MONTAJE DE LA CÚPULA DE LA TIENDA**

1

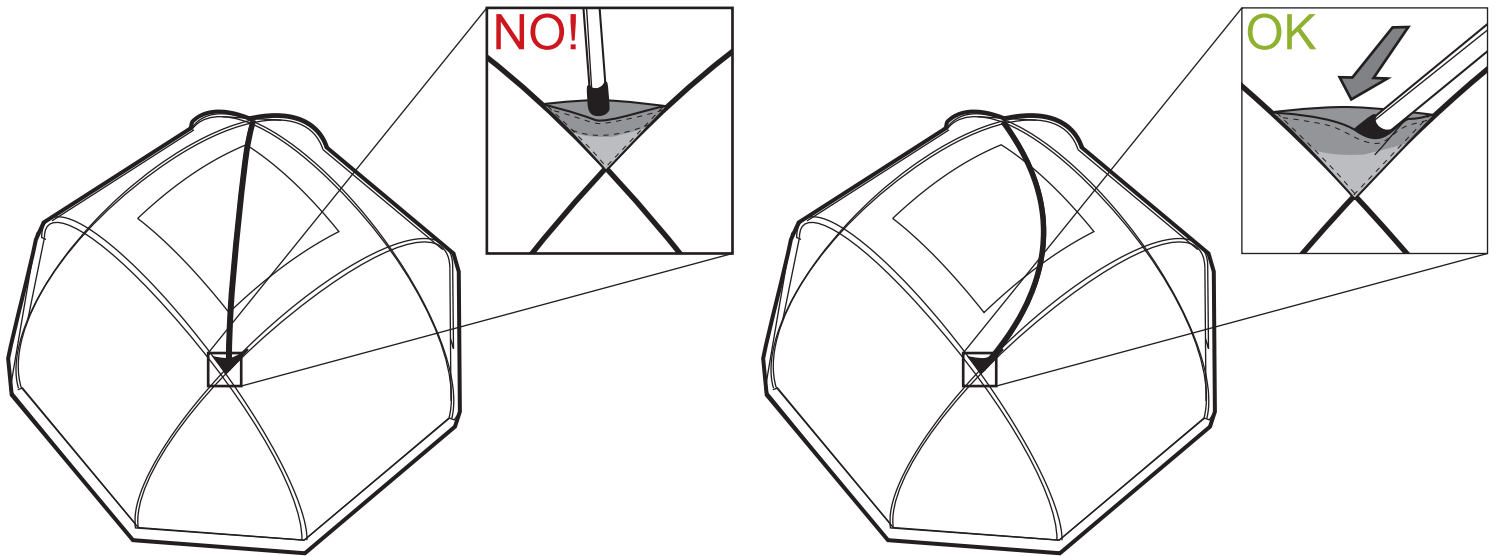

INSERIRE I PALI DEL CUPOLINO NELLE TASCHINE ALL'INTERNO TENENDO IL PALO INCLINATO E NON PERPENDICOLARE ALLA TENDA.
INSERT THE POLES OF THE SCREEN ROOF INTO THE INTERNAL POCKETS, HOLDING EACH POLE AT AN ANGLE
INSERER LES ARCEAUX DU DOME DANS LES POUCHES INTERIEURES EN MAINTENANT L'ARCEAU INCLINE
INTRODUCIR LAS VARILLAS DE LA CUPULA EN LOS BOLSILLOS INTERNOS MANTENIENDO LA VARILLA INCLINADA

2

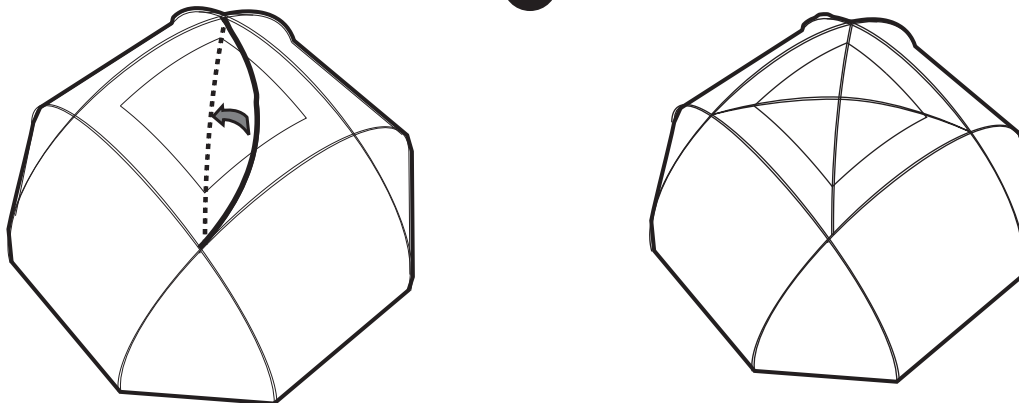

DOPO L'INSERIMENTO, RUOTARE IL PALO IN POSIZIONE VERTICALE. RIPETERE L'OPERAZIONE CON IL SECONDO PALO.
AFTER INSERTING THE POLE, TURN IT SO THAT IT IS UPRIGHT AND REPEAT THE OPERATION FOR THE SECOND POLE
APRES LES AVOIR INSERER, TOURNER L'ARCEAU EN POSITION VERTICALE ET REPETER L'OPERATION AVEC LE DEUXIEME ARCEAU
LUEGO GIRAR LA VARILLA HASTA LA POSICIÓN VERTICAL Y REPETIR LA OPERACIÓN CON LA SEGUNDA VARILLA

3

ASSICURARE CON I CORDINI
SECURE WITH THE TIES
FIXER A L'AIDE DES CORDONS
ASEGURAR CON LAS CUERDAS

x4

